

Unloading tanks from the container

Stainless steel tanks lying on a wooden cradle which can be holded from up front

UNLOADING THE CONTAINER :

- 1/ The tank is tied to the pallet by 2 or 2 straps. Remove all the straps.
- 2/ Grab a strap and and pass it around the wooden cradle. With the help of the fork lift, pull the tank over the edge of the container.
- 3/ Use fork extensions so as to ensure the stability of the cradle while removing the tank out with the fork lift



- 4/ Take the tank out from the container and unload it on the ground.