


## Installation Instructions

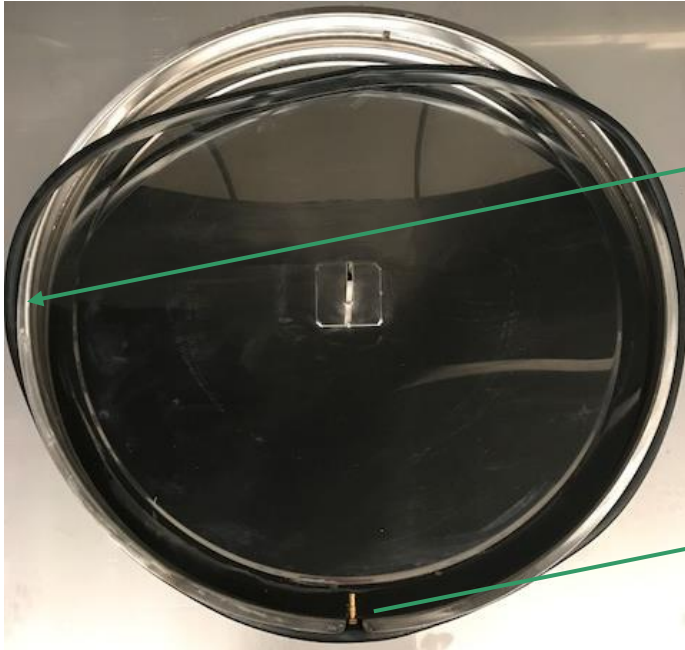

1. Place the air valve into the hole on the rim of the lid.
2. Without pulling on the valve, wrap the tube on both sides of the valve, to the center of the lid. Be sure to keep the tube straight, without twisting.
3. Pull evenly on both sides of the tube to complete the placement around the lid. Be careful to apply pressure evenly and symmetrically to avoid pulling on the valve.
4. Loosen the hose clamp and place on the end of the air tube. Insert the valve into the air tube and moderately tighten the nut on the hose clamp around the valve using a screw driver or a wrench.

